


**Powered Height –Adjustable Steel Stand**

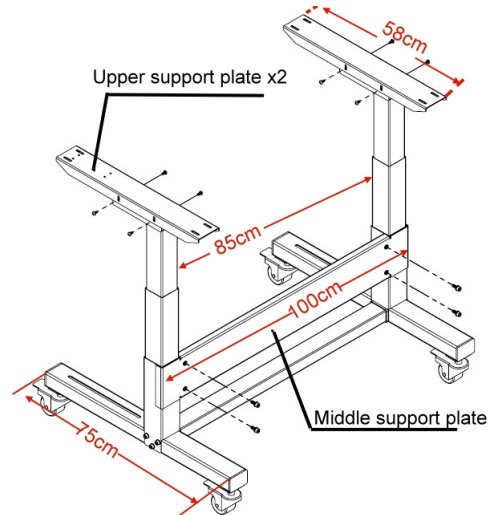

**Item No. PHAS**      **Max. lifting weight 150kgs.**

Adjustable height : from 76cm (30") to 116cm (45.6") you can choose your preferred height setting and memorize 3 different height.  
Just place your table on top of the stand.

**Operating instruction**


**1. Initialize (reset to zero)**

The lifting table needs to be initialized when the following situations occur :  
1.System abnormalities; 2.Power outage during operation;  
3. Display "RST" on the screen

Method:

Press and hold the "down" button again for about 5 seconds to automatically enter initialization mode;

When the system enters initialization mode, don't to release the "down" button until a buzzer sounds indicating successful initialization.

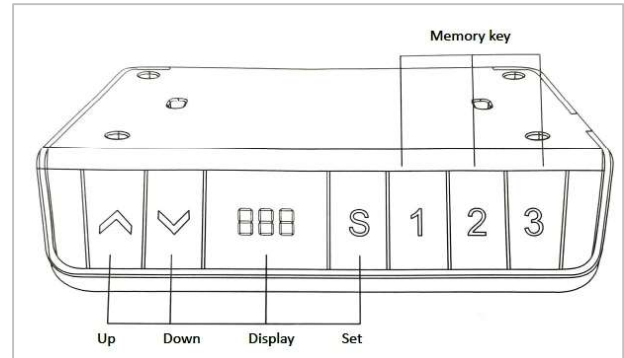

**2. Operation for "up" and "down" key**

1.Press and hpld the "Up" key, and the table runs up until it reaches its highest position

**3. Operation for "Memory" key**

1.Run to the specified height and press the "S" key  
2.At this point, the screen display "S-" and "-" flashes;  
3.Press the number "1-3" to store memory bits;

Run:

1. Press the corresponding number once to reach the designated storage height;  
2.At this time, the stored height number will be displayed and automatically run to the corresponding height;  
3. Press any key to stop while running.



**4. Setting for High and low limit**

Method:

Press and hold the "up" and "down" keys simultaneously for about 5 seconds, and hearing the buzzer sound indicates successful setting;

Cancel:

Perform initialization operation;

Or press and hold the "up" and "down" keys simultaneously for about 5 seconds, and when it is in the lower half of the stroke, it is set to the lowest position

**5. Locking and unlocking (child lock)**

Lock : Press and hold the "S" and "UP" keys simultaneously for about 5 seconds, When "Loc" is displayed, it indicates that the system is locked and cannot be operated at this time;

Unlock : Press and hold the "S" and "down" keys simultaneously for about 5 seconds, When the display changes from "Loc" to a number, it indicates that the system has been unlocked and can be operated normally;

**6. Reset factory settings**

If the system is replaced with a new table ; the parameters need to be reset to the factory settings;

Method:

Press and hold the "UP" and "down" keys simultaneously for about 10 seconds, and hear a longer sound from the buzzer indicating that parameters have been reset to factory settings.